

The **fast** guide to...

PIV

Loft Mounted Heated

Installation

Install the unit in your loft space, as central to the property as possible

Air Intake

The unit draws in fresh air from outside, through the cracks, gaps and vents in the loft space

Filtration

The incoming air is filtered to remove pollutants and allergens

Temperature Sensing

Air is monitored and heated if below the temperature set

Distribution

Gently pushes the filtered air through the home

Dilution and Displacement

The fresh air dilutes and displaces moist, stale air inside the house, pushing it out of cracks, gaps and vents throughout the property

Improves Air Quality

Enhances overall indoor air quality and prevents condensation and mould by maintaining a steady flow of fresh air